



Usage condition:
TANOS 2B is only used after completing
coordination with Regional Air Command
Centre III.

Scale 1:1 250 000
2 0 2 4 6 8 10 12 14 16 18 Kilometres
2 0 2 4 6 8 10 N.M

1300
800
300
Contour
Intervals