


TRANSITION ALT 2750M

**MISSED APPROACH:
DIRECT TO VD900, TURN RIGHT DIRECT TO VD901 AT 900M, JOIN HOLDING PATTERN OR FOLLOW VAN DON TWR INSTRUCTIONS.**

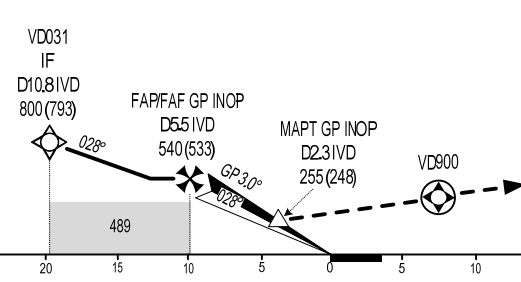

DME DIST	1	2	3	4	5.5
ALT	103	200	297	394	540

OCA (H)		A	B	C	D
STRAIGHT-IN APPROACH	CAT I	97 (90)	100 (93)	103 (96)	106 (99)
	GP INOP	255 (248)			
CIRCLING		480 (472)		600 (592)	

FAF - MAPT 3.2NM (5.9KM)							
GS	KMH	100	150	200	250	300	300
TIME	MINS	3:34	2:22	1:47	1:25	1:11	1:01
RATE OF DESCENT FAF-MAPT 3.0°	MS	1.5	2.2	2.9	3.6	4.4	5.1